

Cover Removal

Engine Side Cover Removal

Refer to *Safety Precautions* on [page 122](#).

The left engine side cover must be removed for coolant maintenance.
The right engine side cover must be removed for engine oil and rear brake fluid maintenance.

NOTICE

Failure to use extreme care removing or installing the engine side covers may damage the engine side cover prongs.

Removal

1. Carefully pull the rear of the engine side cover out until the prongs are clear of their securing grommets.
2. Remove the engine side cover backward.

Installation

- Installation can be done in the reverse order of removal.

LEFT SIDE

