

## Cylinder Head Side Cover Removal

Refer to *Safety Precautions* on [page 122](#).

Both cylinder head side covers must be removed for spark plug maintenance. The left cylinder head side cover must be removed for crankcase breather maintenance.

### Removal

1. Remove the rubber plugs.
2. Remove the cylinder head side cover by removing the bolts.

### Installation

- Installation can be done in the reverse order of removal.

### LEFT SIDE

