
## **Comfort & Convenience Adjustment**


If an indicator blinks, the battery is probably low. If the indicator continues to blink after riding for a while, charge or replace the battery.

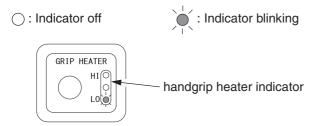

When you are making a temporary stop or riding at low speed, the battery voltage level may go down. This can turn off the handgrip heater automatically. The heater then resumes it operation when the battery voltage level recovers after riding for a while.

If you find any other cases of abnormalities, see your dealer.

If all three indicators blink, turn the ignition switch to the OFF position and then turn it back to the ON position.

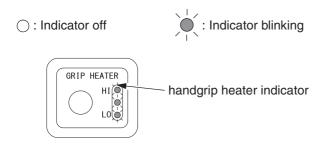

If indicators continue to blink, or if you find other abnormalities with the indicators, see your dealer.