

Cover Removal

Cylinder Head Side Cover Removal

Refer to *Safety Precautions* on page 122.

Both cylinder head side covers must be removed for spark plug maintenance. The left cylinder head side cover must be removed for crankcase breather maintenance.

Removal

1. Remove the rubber plugs.
2. Remove the cylinder head side cover by removing the bolts.

Installation

- Installation can be done in the reverse order of removal.

LEFT SIDE

