


Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 122.

RIGHT SIDE

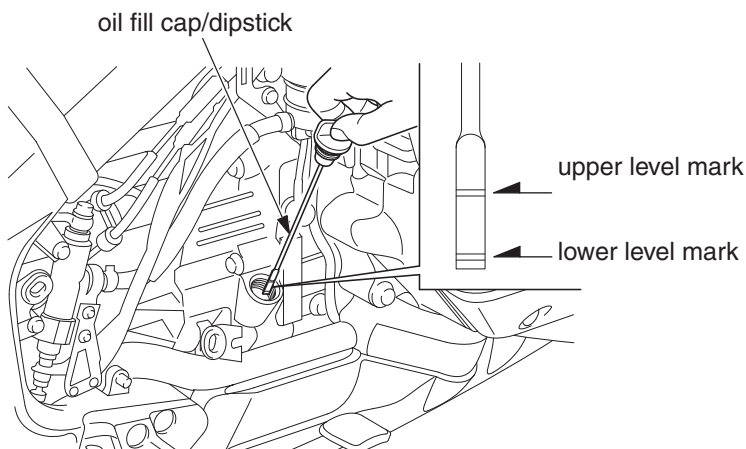

(Models equipped with center stand)

1. Park your motorcycle on its center stand on a firm, level surface.

(Models not equipped with center stand)

1. Park your motorcycle on its side stand on a firm, level surface.

2. Remove the right engine side cover (page 136).

3. Start the engine and let it idle for 3 – 5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.

4. Stop the engine and wait 2– 3 minutes.

(Models not equipped with center stand)

5. Hold the motorcycle in an upright position.

6. Remove the oil fill cap/dipstick and wipe it clean.

7. Insert the oil fill cap/dipstick until it seats, but don't screw it in.

8. Remove the oil fill cap/dipstick and check the oil level.

- If the oil is at or near the upper level mark — you do not have to add oil.
- If the oil is below or near the lower level mark — add the recommended oil until it reaches the upper level mark. (Do not overfill.)

9. Reinstall the oil fill cap/dipstick.

10. Reinstall the right engine side cover.

11. Check for oil leaks.