

### Steering lock indicator


Comes on briefly while the steering lock is activating.

**Steering lock:**  P.55

### Clutch temperature indicator

GL1800BD/D/DA

Comes on briefly when the ignition switch is turned ON.

**If the indicator flashes on while riding:**  P.181


### Honda SMART Key indicator

Comes on briefly when the ignition switch is turned ON.

**When the Honda SMART Key Indicator Flashes:**  P.180


### AIRBAG indicator GL1800DA

Comes on briefly when the ignition switch is turned ON.

**If the indicator comes on while riding:**  P.182


### Low oil pressure indicator

Comes on when the ignition switch is turned ON. Goes off when the engine starts.

**If the indicator comes on while engine is running:**  P.179

### PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned ON.

**If the indicator comes on while engine is running:**  P.179

### High beam indicator

