

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional larger tool kit may be available. Check with your Honda dealer’s parts department.

<b>Importance of Maintenance</b> .....	P. 139	<b>Final Drive Oil</b> .....	P. 163	<b>Other Replacement</b> .....	P. 174
<b>Maintenance Schedule</b> .....	P. 140	<b>Brakes</b> .....	P. 164	Honda SMART Key Battery.....	P. 174
<b>Maintenance Fundamentals</b> .....	P. 143	<b>Side Stand</b> .....	P. 167		
<b>Removing &amp; Installing Body Components</b> .	P. 153	<b>Clutch</b> .....	P. 168		
Battery .....	P. 153	<b>Throttle</b> .....	P. 169		
Cylinder Head Side Cover .....	P. 154	<b>Crankcase Breather</b> .....	P. 170		
Fog Light Cover.....	P. 155	<b>Other Adjustments</b> .....	P. 171		
Left Engine Side Cover .....	P. 155	Headlight Aim .....	P. 171		
Side Cover.....	P. 156	Clutch and Brake Levers .....	P. 171		
<b>Spark Plug</b> .....	P. 157	Electrical Adjustable Suspension			
<b>Engine Oil</b> .....	P. 158	GL1800/D/DA .....	P. 172		
<b>Coolant</b> .....	P. 162	Rear Suspension GL1800B/BD .....	P. 173		