

# Maintenance Schedule

| ITEM                        |    | FREQUENCY | ODOMETER READING (Note 1) |     |      |      |      |      |      | Refer to page |
|-----------------------------|----|-----------|---------------------------|-----|------|------|------|------|------|---------------|
|                             |    |           | × 1,000 mi                | 4   | 8    | 12   | 16   | 20   | 24   |               |
|                             |    | NOTE      | × 1,000 km                | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 |               |
| NON-EMISSIONS-RELATED ITEMS |    |           |                           |     |      |      |      |      | R    | 186           |
|                             |    |           |                           |     |      | R    |      |      | R    | 197           |
|                             |    | 5         |                           |     |      |      |      |      |      | 199           |
|                             |    |           |                           |     |      |      |      |      |      | 200           |
|                             | *  |           |                           |     |      |      |      |      |      | —             |
|                             | *  |           |                           |     |      |      |      |      |      | —             |
|                             |    |           |                           |     |      |      |      |      |      | 188           |
|                             |    | 5         |                           |     |      | R    |      |      | R    | 189           |
|                             | *  |           |                           |     |      |      |      |      |      | —             |
|                             |    |           |                           |     |      |      |      |      |      | 208           |
|                             | *  |           |                           |     |      |      |      |      |      | —             |
|                             | ** |           |                           |     |      |      |      |      |      | —             |
|                             | ** |           |                           |     |      |      |      |      |      | —             |

- \* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual ([page 270](#)).
- \*\* In the interest of safety, we recommend these items be serviced only by your dealer.