## **Display Illumination Adjustment**

(Models not equipped with Navigation System) To adjust the brightness of the display:

Push the DIM button once. "DIMMER" will display.

- To brighten the display push the TRIP button (+).
- To darken the display push the INFO button (–). (The brighter and darker ranges each have six steps.)
- To set the selected step push the SETUP button.

