

Multi Information Display

Air Temperature Meter

Push the INFO button once to display the air temperature.
After 5 seconds, the previous display returns.

USA: Fahrenheit (°F)

Canada: Centigrade (°C)

Temperature Display

(Models not equipped with Navigation System)

Below 13°F (-11°C)	“- -” is displayed
Between: 14°F – 122°F (-10°C – 50°C)	actual air temperature is indicated
Above 122°F (50°C)	The display will remain and blink “122°F (50°C)”

(Models equipped with Navigation System)

Below 13°F (-11°C)	“- -” is displayed
Between: 14°F – 158°F (-10°C – 70°C)	actual air temperature is indicated
Above 158°F (70°C)	The display will remain “158°F (70°C)”

The temperature sensor is located in the upper fairing. Therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from the surrounding traffic. This can cause an error in the temperature reading when your speed is under 19 mph (30 km/h).

For USA

(Models not equipped with Navigation System)

83 °F



↑
INFO button

For Canada

(Models equipped with Navigation System)

23 °C



↑
INFO button