Tire Pressure Monitoring System (TPMS)

Your motorcycle is equipped with a tire pressure monitoring system (TPMS) that turns on every time you start the engine and it monitors the pressure in your tires while riding.

Each tire has its own pressure sensor. If the air pressure of a tire becomes significantly low while riding, the sensor in that tire sends a signal that causes the low tire pressure indicator to turn on.

As required by the FCC (USA only):

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device also complies with Industry Canada Standard RSS-210. Operation is subject to the f ollowing two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.