


iPod[®]/USB Flash Drive

(Models not equipped with Navigation System)


RETURN button TITLE button

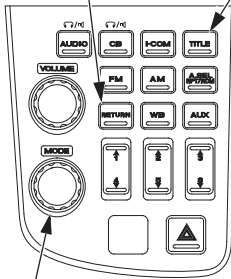

MODE knob/button

(Models equipped with Navigation System)

TITLE/RETURN button

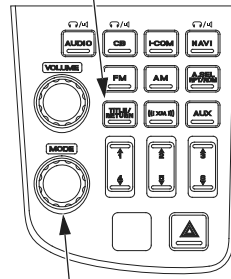

MODE knob/button


You can also change or select files and folders by using TUNE/CH lever while a USB flash drive is playing files.

Push the TUNE/CH lever up to change to the next file.

Push the TUNE/CH lever down to change to the previous file.


To change the folders, push and hold the TUNE/CH lever up or down.

(Models not equipped with Navigation System)

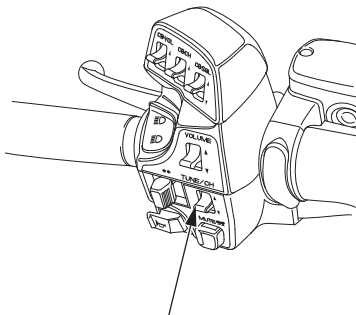

TUNE/CH lever

(Models equipped with Navigation System)

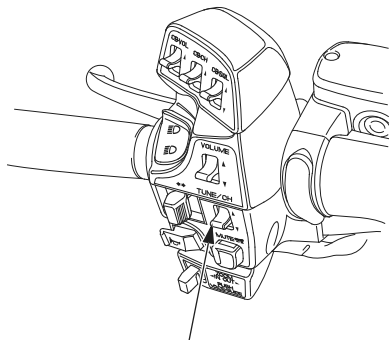

TUNE/CH lever