

Intercom (I-COM) System

Intercom Muting

The intercom mute system automatically lowers (does not silence) the music/program volume when you speak through the intercom.

The sensitivity of the intercom microphone to your voice or ambient sound sets the level at which the intercom system mutes the music/program volume.


To adjust this system push the VOLUME knob/button until “INTERCOM MUTE” (“Intercom Mute”) is displayed (page 98).

- To increase microphone sensitivity — turn the VOLUME knob/button clockwise.
- To decrease microphone sensitivity — turn the VOLUME knob/button counterclockwise. (Intercom Mute control range: from 0 to 20)


(Models not equipped with Navigation System)

(Models equipped with Navigation System)

VOLUME knob/button

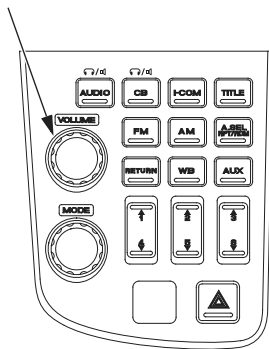

VOLUME knob/button

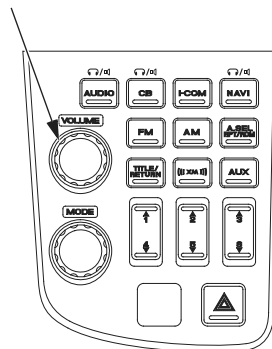

INTERCOM MUTE
VOL **8**

Volume 8
Intercom Mute