

Cover Removal

Front Lower Cover Removal

Refer to *Safety Precautions* on [page 154](#).

The front lower cover must be removed for engine oil maintenance.

Removal

1. Remove the clips.
2. Remove the bolts.

Installation

Installation can be done in the reverse order of removal.

FRONT

