
# **Riding with Cruise Control**

#### RIGHT HANDLEBAR

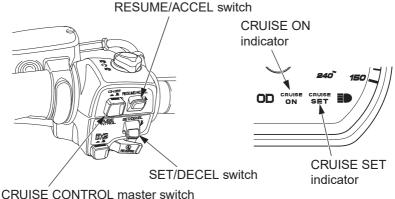

### CITOISE CONTINUE master switch

## **To Set Cruise Control**

- Make sure you are in 4th gear or OD (5th gear), and that your speed is between 30 and 100 mph (48 and 161 km/h).
  Any speed above 100 mph (161 km/h) will be memorized as 100 mph (161 km/h).
- 2. Push the CRUISE CONTROL master switch. (The CRUISE ON indicator will come on.)
- 3. Accelerate to the desired speed.
- 4. Push the SET/DECEL switch. (The CRUISE SET indicator will come on.)

## To Change the Set Speed

## To Fine Tune the Set Speed

- To increase the set speed tap the RESUME/ACCEL switch.
- To decrease the set speed tap the SET/DECEL switch. Each quick tap (brief push and release) on either switch will change your speed by approximately 1 mph (1.6 km/h).

## To Automatically Change the Set Speed

- To increase the set speed hold the RESUME/ACCEL switch in. The system will accelerate your motorcycle automatically. When you reach the desired speed, release the switch.
- To decrease speed hold the SEL/DECEL switch in. The system will automatically slow your motorcycle. When you reach the desired speed, release the switch.