



Cruise control set speed & Air temperature gauge display

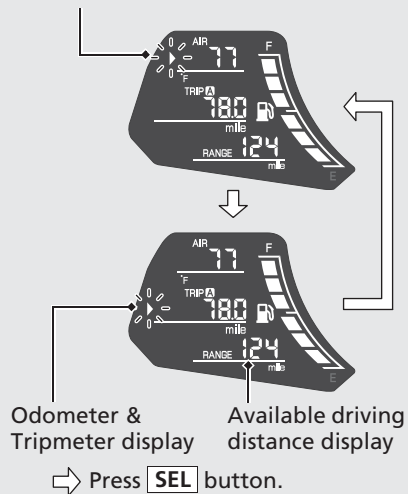

1 Cruise Control Set Speed (🚗) & Air temperature Gauge [AIR] Display

To select cruise control set speed or Air temperature gauge, Press **SET** button when the cursor is at cruise control set speed and Air temperature gauge display.

Cruise control set speed (🚗)

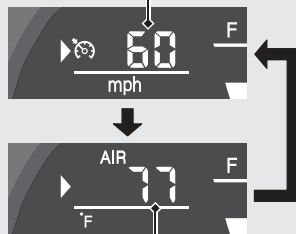

Air temperature gauge

➡ Press **SET** button.

- 1 Press **SEL** button to move the cursor to the cruise control set speed and air temperature gauge display.
- 2 Press **SET** button to select the cruise control set speed or air temperature gauge.

Cruise Control Set Speed (🚗)

The speed set for the cruise control is displayed.

If the cruise control set speed does not memorized, "----" is displayed.

Cruise Control: ➡ P.123

Air Temperature Gauge [AIR]

Displays ambient temperature.

Display range: 14 to 122°F (-10 to 50°C)

- Below 13°F (-11°C): "----" is displayed
- Above 122°F (50°C): 122°F or 50°C flashes

The temperature readout may be incorrect at low speeds due to reflected heat.