

## Restarting the Engine

Check that the Idling Stop indicator is flashing, and then open the throttle.

The engine will not restart if the rider is not sitting astride the motorcycle.

When restarting on a slope, release the brakes after you feel the motorcycle begin to move.

- ▶ If the indicator is not flashing, you cannot restart the engine with the Idling Stop system, even if you open the throttle.
- ▶ In the following conditions while the engine is stopped by the Idling Stop system, the Idling Stop indicator changes from flashing to off and you cannot restart the engine, even if you open the throttle.
  - When the side stand is lowered
  - When the motorcycle has fallen over
  - When the rider has not been sitting astride the motorcycle for approx. 3 minutes

To restart the engine when the Idling Stop indicator not flashing, shift the transmission into neutral and press the start/Idling Stop button. (To restart except in Neutral, apply the brake lever firmly, and then press the start/Idling Stop button.)

- ▶ The engine starts in the following conditions without opening the throttle grip.
  - When changing the Idling Stop system from on to off
  - When the gear position is changed to Neutral (N)
  - When the motorcycle moves by releasing the brakes while stopped on a slope
  - When the battery is weak
    - A few seconds before restarting the engine, the Idling Stop indicator flashes quickly. After restarting, the Idling Stop indicator turns off and the system does not operate until the battery voltage has recovered.
    - See your dealer for checking the battery.
  - When the Hill Start Assist (HSA) system is activated with the brakes applied firmly

## Engine Does Not Start Even If the Throttle is Opened: P.187