



 




## ▮ Preset Stations

### To Store a Station Manually:

You can store the frequencies of your favorite radio stations.



You can store 12 AM stations and 12 FM stations in user preset mode.

- 1 Press  or **ENT** switch to select [User] preset mode.
- 2 Tune in to a station you want to store.
- 3 Press and hold  or **ENT** switch.
- 4 Move  /  or press  /  on the 4-way key switch to select a preset number (1 to 12).
- 5 Press and hold  or **ENT** switch.






### To Store a Station Automatically:

If you are traveling far from home and can no longer receive the stations you preset, you can use the auto select function to find stations in the local area.

You can store 12 AM stations and 12 FM stations in auto preset mode.

- 1 Press  or **ENT** switch to select [Auto] preset mode.
- 2 Press and hold  or **ENT** switch.  
The audio system will seek and store stations with strong signal automatically.
  - ▶ To cancel the scan, select [Abort].
  - ▶ If you are in a remote area, the auto select function may not find 12 stations.
  - ▶ If no available station is detected at all, the stored preset stations are kept.
  - ▶ If even one station is detected, all the preset stations are overwritten.

### To Select a Preset Station:

- 1 Move  /  or press  /  on the 4-way key switch to select a preset station.
- 2 Press and hold  or **ENT** switch.