








Audio System (Continued)

-  Repeat all play mode: Repeats all tracks in the current playlist ([Artists], [Albums] or [Folders], etc.).
-  Track repeat play mode: Repeats the current track.
-  Random play mode: Plays tracks randomly from the current playlist.
-  Random & Repeat all play mode: Plays tracks randomly and repeats all tracks in the current playlist.
-  Random & track play mode: Plays tracks randomly and repeats the current track.

To Select a Track from the Playlist


You can select a track from various playlists depending on the connected device.



- 1 Press  or **ENT** switch to display the playlist.
- 2 Press  on the 4-way key switch to change the playlist tab.

When iPod or Bluetooth® device is connected: [Artists] → [Albums] → [Playlist] → [Songs] → [Genres]

When USB device is connected: [Folders] → [Songs]

- 3 Select a desired item from the playlist, and then press  or **ENT** switch.

- Available operating functions may differ depending on the connected device and the type of file being played back.
- If an iPhone is connected via Apple CarPlay, the iPod/USB source is unavailable and audio files on the phone can only be played within Apple CarPlay.