


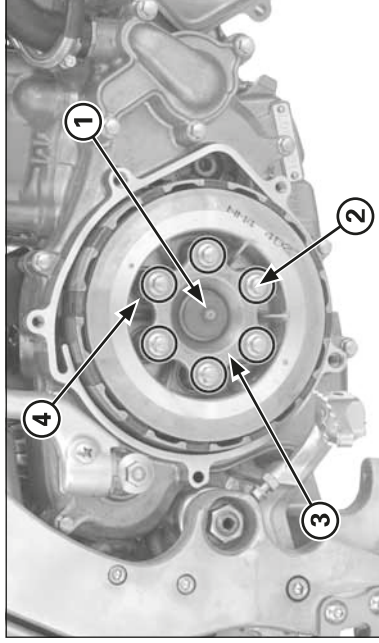

- (1) CLUTCH LIFTER PIECE ASSEMBLY
(2) LIFTER PLATE BOLTS
(3) LIFTER PLATE
(4) CLUTCH SPRINGS

Clutch

Removal


Pull the clutch lever and hold it with a suitable clamp.

Remove the bolts and clutch cover without disconnecting the clutch fluid line.


Remove the clutch lifter piece assembly.

Remove the following:

- Clutch lifter plate bolts
- Lifter plate
- Clutch springs

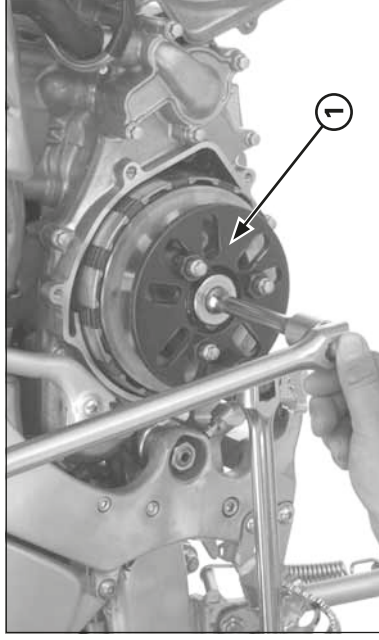

- (1) CLUTCH CENTER HOLDER

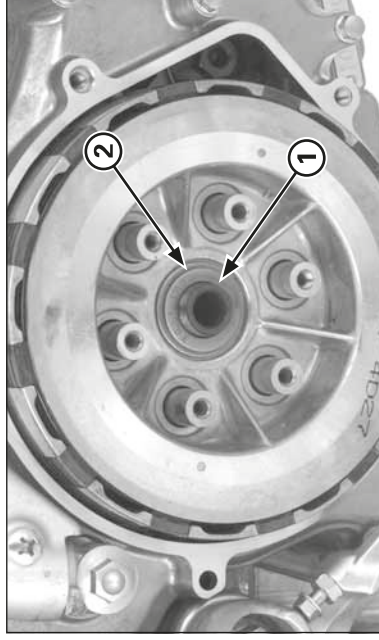


- (1) LOCK WASHER
(2) PLAIN WASHER

Hold the clutch assembly with the clutch center holder and remove the clutch center nut.


Tool:

Clutch center holder 07JMB-MN50302

Remove the lock washer and plain washer.

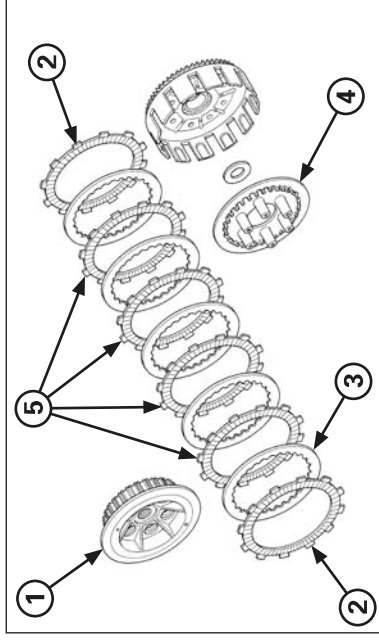

- (1) CLUTCH CENTER
(2) CLUTCH PLATE
(3) PAPER DISCS
(4) CLUTCH DISCS
(5) PRESSURE PLATE

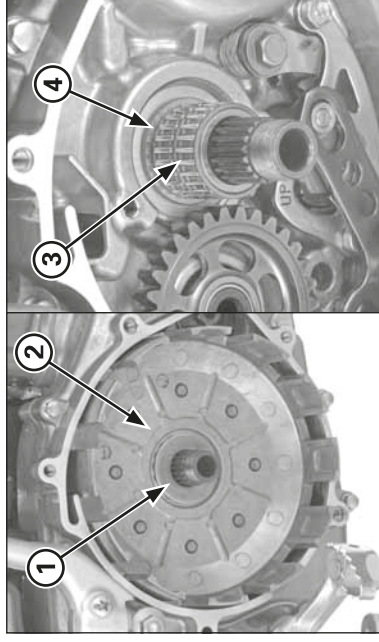

- (1) THRUST WASHER
(2) CLUTCH OUTER
(3) NEEDLE BEARING
(4) CLUTCH OUTER GUIDE

Remove the following:

- Clutch center
- Six clutch discs
- Five clutch plates
- Clutch pressure plate

Remove the thrust washer, clutch outer, needle bearing and clutch outer guide.