


- (1) DOWEL PINS
- (2) NEW GASKET

Installation

Install two dowel pins and new gasket onto the crankcase.

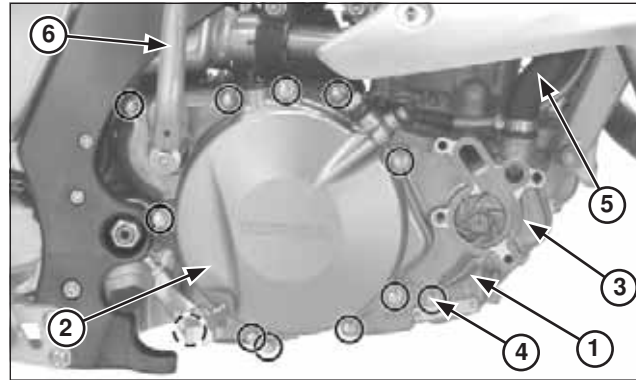

- (1) RIGHT CRANKCASE COVER
- (2) CLUTCH COVER
- (3) WATER PUMP COVER
- (4) BOLTS
- (5) RADIATOR HOSE
- (6) KICKSTARTER PEDAL


Install the right crankcase cover while turning the water pump impeller.
 Check the clutch cover O-ring is in good condition, replace if necessary.
 Install the clutch cover.

Install the water pump cover (page 3-15).


Tighten the right crankcase cover bolts in a crisscross pattern in 2 – 3 steps.
 Install the kickstarter pedal and tighten the bolt to the specified torque.

Torque: 37 N•m (3.8 kgf•m, 27.4 lbf•ft)

Connect the lower radiator hose.
 Fill the crankcase with recommended transmission oil (page 2-8).
 Fill the coolant and bleed air.

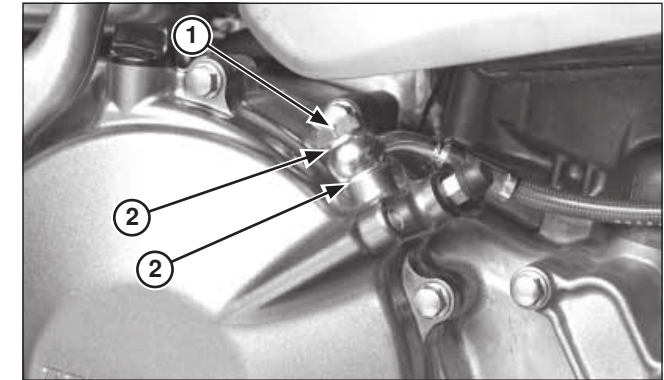

- (1) OIL BOLT
- (2) SEALING WASHERS

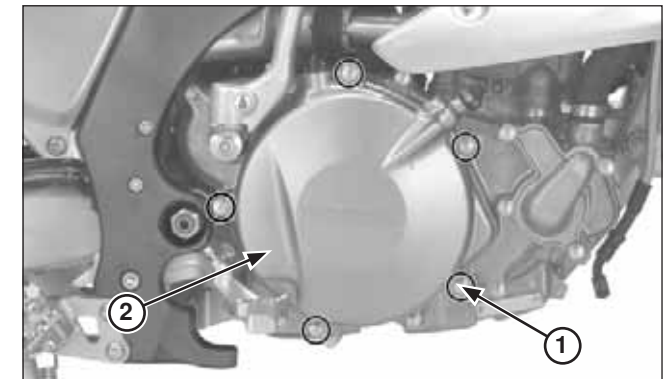

- (1) BOLTS
- (2) CLUTCH COVER

Clutch Slave Cylinder

Drain the clutch fluid from the clutch hydraulic system.

Remove the oil bolt, sealing washers and clutch hose eyelet.

Remove the bolts, clutch cover and O-ring.
 Remove the dowel pins.