

Display Setting

 
You can adjust the following settings.

- Clock setting
- Changing of speed and mileage unit


If the **SET** button was not pressed during the adjustment, and no buttons were pressed for about 30 seconds, the display will stop flashing automatically and the adjustment will be cancelled.

1. To set the clock:

- 1 Turn the ignition switch on.
- 2 Press and hold the **SEL** and **SET** buttons until the hour digits start flashing.



 - 3 Press the **SEL** button until the desired hour is displayed.
 - ▶ Press and hold to advance the hour fast.



- 4 Press the **SET** button. The minute digits start flashing.

