

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. To move the headlight, loosen the adjusting bolt.

Tighten the adjusting bolt after adjustment. Obey local laws and regulations.

