

Instruments & Controls

The items listed below are described in this section.

Operation Component Locations	11
Fuel Gauge	14
Indicators & Display	16
Neutral Indicator	16
Reverse Indicator	16
Parking Brake Indicator	16
4WD Indicator	16
Front Differential Lock Indicator	16
High Coolant/Oil Temperature Indicator	16
PGM-FI Malfunction Indicator Lamp (MIL)	17
Low Fuel Indicator	17
Multi-function Display (U, CM type only).....	20
Gear Position Indicator (U, CM type only)	21
Oil Change Indicator (U, CM type only).....	22
Odometer (U, CM type only).....	23
Tripmeter (U, CM type only).....	23
Hourmeter (U, CM type only)	24
Driver Controls	25
Ignition Switch	25
Headlight Switch	26
Shift Lever	27
Drive Mode Lever	28
Parking Brake Lever	29
Doors	30
Side Nets	32
Seat	36
Seat	36
Adjustable Seat-Back	37

(cont'd)