

# Driver Controls

You should change drive modes only when the vehicle is stopped and the engine is idling.

## NOTICE


*Changing drive modes while the vehicle is moving could damage the drivetrain.*

After changing the drive mode, drive several yards, making right and left turns, and make sure that indicators work properly. If the indicators do not go out or come on according to the drive mode position, see your dealer.

## Parking Brake Lever


The parking brake lever is located just in front of the bench seat between the driver's and passenger's seating positions. To apply the brake, pull the lever up fully. To release it, pull up slightly, push the button at the end of the lever, then lower it.

parking brake lever

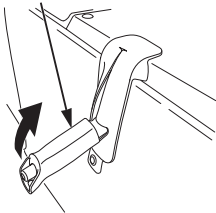

TO APPLY  
THE PARKING BRAKE

button

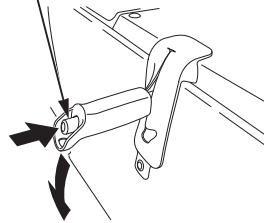

TO RELEASE  
THE PARKING BRAKE

## NOTICE

*Driving with the parking brake on can damage the rear brakes and drivetrain.*