

# Storing Your Honda

---

5. Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 160) once per month.

## **WARNING**

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.

6. Wash and dry your Honda MUV. Wax all painted surfaces.
7. Inflate the tires to their recommended pressures (page 148).
8. Store your Honda MUV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
9. Place your Honda MUV on blocks to lift all tires off the floor.
10. Cover your Honda MUV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.