

Spark Plug

Spark Plug Recommendation

standard spark plug	BKR5E-11 (NGK) or K16PR-U11 (DENSO)
---------------------	--

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on [page 79](#).

1. Remove the seat ([page 93](#)).
2. Remove the screws A, screws B and screws C.
3. Remove the center panel while pulling forward the middle of the center fender.

