

## Fluid Level Inspection

Refer to *Safety Precautions* on [page 79](#).

### Brake Fluid Level

If your inspection indicates a low fluid level, have your dealer inspect the brake system for possible leaks or worn brake pads.

The brake fluid level will drop as the brake pads wear.

Do not add or replace brake fluid, except in an emergency. If you do add fluid, have your dealer check the system as soon as possible.


### NOTICE

*Brake fluid can damage plastic and painted surfaces. Handle with care.*

Check the fluid level on level ground.

1. Open the front hood ([page 92](#)).
2. Slide the brake fluid reservoir tank cap cover up a little to reveal the MAX level mark. But never remove the brake fluid reservoir tank cap cover.

**UNDER FRONT HOOD**  
**LEFT FRONT**

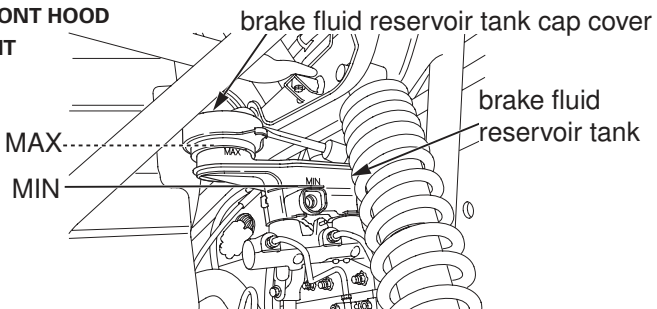

It should be between the MIN and MAX level marks. If the level is at or below the MIN level mark, check the brake pads for wear ([page 142](#)).

3. Return the brake fluid reservoir tank cap cover to its normal position.