

# If the Transmission Is Not Functioning Properly

---

If the PGM-FI malfunction indicator lamp (MIL) lights or blinks while driving, perform the following:

1. Stop the Honda MUV.
2. Turn the ignition switch to the OFF (O) position.
3. After the engine stops, turn the ignition switch to the ON ( I ) position.
4. Check the PGM-FI malfunction indicator lamp (MIL).

When the PGM-FI malfunction indicator lamp (MIL) is blinking:

Restart the engine; drive the vehicle to a location where it can be loaded and transported to your dealer.

When the PGM-FI malfunction indicator lamp (MIL) returns to normal:

You may drive the vehicle as usual after restarting the engine.

However, we urge you to have your Honda MUV inspected by your dealer.

(cont'd)