

If the High Coolant/Oil Temperature Indicator Lights

- If the reserve tank is low or empty, don't drive without adding coolant ([page 114](#)). After adding coolant, turn the engine on and check the high coolant/oil temperature indicator.
If the indicator doesn't turn off, do not drive. The engine needs repair. Transport your Honda MUV to a dealer ([page 168](#)).
If the temperature drops to normal, check the coolant level. If it has gone down, add more coolant.
- Check for an oil leak.
- Check the oil level. If necessary, add the recommended oil ([page 99](#)) to the upper level mark. If you must leave your Honda MUV to get oil, secure it as much as possible.
- Start the engine, and check that the high coolant/oil temperature indicator goes off.

If the indicator goes off, resume driving. If there is a leak, do not drive the MUV until the leak is repaired by your dealer.

If there's a mild coolant leak, you can drive for a while, carefully watching the indicator. Be prepared to stop and add more coolant or water. If the leak is bad, transport your Honda MUV to your dealer ([page 168](#)).