

4. Install the new clutch oil filter with the rubber seal facing in, toward the engine. You will see "OUT-SIDE" mark on the clutch oil filter body, toward the filter cover.
5. Replace the O-ring and apply a thin coat of engine oil to the new O-ring before installing it.
6. Install the spring and the clutch oil filter cover.
7. Install the clutch oil filter cover bolts and tighten.
8. Install the right under cowl. ➤ P. 78
9. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.  
➤ P. 85
10. Install a new engine oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).

11. Install a new sealing washer onto the drain bolt. Install the drain bolt and tighten.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m).

12. Fill the crankcase with the recommended oil (➤ P. 64) and install the oil fill cap/ dipstick.

**Required oil**

**When changing oil, engine oil filter & clutch oil filter:**

3.6 US qt (3.4 liters)

13. Check the oil level. ➤ P. 82
14. Check that there are no oil leaks.