


Instruments *(Continued)*

4 Changing of speed and mileage unit:

- 1 Press the **SEL** button to select either "mph" and "mile" or "km/h" and "km."

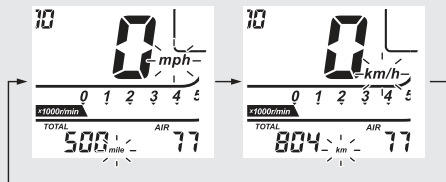

When selecting the "mph" and "mile", the fuel mileage unit shows "mile/gal."

When selecting the "km/h" and "km", the fuel mileage unit shows "km/L" or "L/100km."

- 2 When selecting the "mph" and "mile."

Press the **SET** button. The speed and mileage unit is set, and then the display moves to the changing of temperature gauge unit.

When selecting the "km/h" and "km."

Press the **SET** button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.