


Spark Plug ► Checking Spark Plug

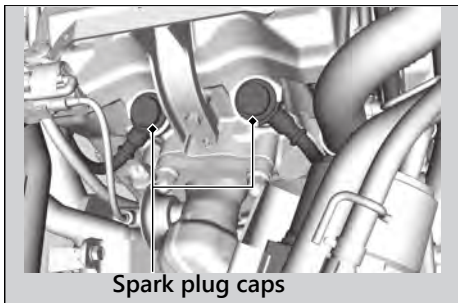

1. Remove the front lower cover. ► P. 78
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug bases.
4. Remove the spark plugs using a suitable spark plug wrench.

5. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.
 - If the erosion or deposit is heavy, replace the plug.
6. Make sure that a 1.1 mm wire-type feeler gauge cannot be inserted between the spark plug gap. If the gauge fits in the gap, replace the plug with a new one.
7. Make sure the plug washer is in good condition.

