



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install the new oil filter and tighten.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf·m)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 22 lbf-ft (30 N·m, 3.1 kgf·m)

10. Fill the crankcase with the recommended oil (► P. 67, ► P. 152) and install the oil fill cap/dipstick.

Required oil

When changing oil & engine oil filter:

3.6 US qt (3.4 L)

When changing oil only:

3.4 US qt (3.2 L)

11. Check the oil level. ► P. 86
12. Check that there are no oil leaks.