


## I Main Fuse

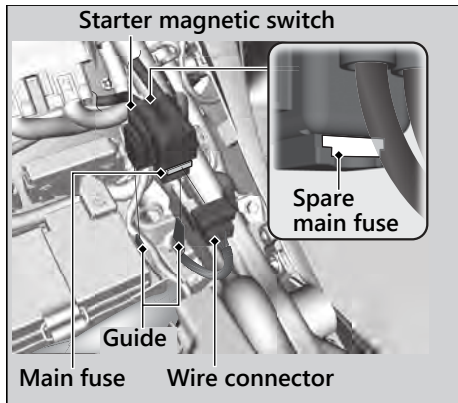

1. Remove the front seat. ► P. 79
2. Remove the starter magnetic switch from the guide.
3. Disconnect the wire connector of the starter magnetic switch.

4. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - Spare main fuse is provided in the starter magnetic switch.
5. Install parts in the reverse order of removal.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.