



## Spark Plug ► Checking Spark Plug

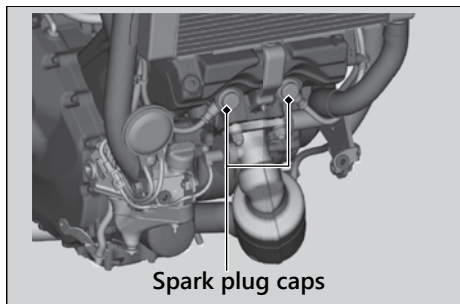

1. Remove the lower cowl.  P. 96
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug bases.
4. Remove the spark plugs using a suitable spark plug wrench.

5. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.
  - If the erosion or deposit is heavy, replace the plug.
6. Make sure that a 1.2 mm wire-type feeler gauge cannot be inserted between the spark plug gap. If the gauge fits in the gap, replace the plug with a new one.

