


Instruments

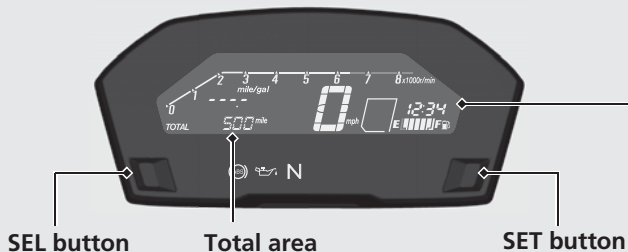

Display Check

All the modes and digital segments will show when the ignition switch is turned on. If any part of these displays does not come on when it should, have your dealer check for problems.

- u If the opening/ending display is being set to SP, letters which have been set are displayed in the total area. To check the display in the total area, set the opening/ending display to STD.
(P34)