

**Tachometer** ( P27)

**NOTICE**

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

**Speedometer**

**Tachometer red zone**  
(excessive engine rpm range)

**Clock**

**To set the clock:** ( P34)

**D indicator** **NC700XD/750XD**

Comes on when the D mode is selected in the AT MODE. ( P60)

**S indicator** **NC700XD/750XD**

Comes on when the S mode is selected in the AT MODE. ( P60)

**Total/Fuel mileage display** ( P22)

**Gear position indicator** ( P33)

**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing:  
approximately 0.85 US gal (3.2 liters)



The reserve tripmeter display and reserve fuel consumption display show at the same time.

