

## ▮ Trip time

Shows the operating time since the engine was started.

The trip time return to 0:00 when the readout exceeds 23:59 (hours:minutes).

## ▮ Today date

**To set the today date:** ( P34)

## ▮ Reserve tripmeter (only when reserve fuel mode)

Distance ridden since the 1st (E) segment of the fuel gauge and RES start flashing.

The RES will flash faster when the fuel decreases further.

When the fuel gauge is near the 1st (E) segment or flashes, fill fuel promptly.

When "----.-" is displayed, go to your dealer for service.



## ▮ Reserve fuel consumption (only when reserve fuel mode)

Fuel consumption since the 1st (E) segment of the fuel gauge and RES start flashing.

The RES will flash faster when the fuel decreases further.

When the fuel gauge is near the 1st (E) segment or flashes, fill fuel promptly.

When "----.-" is displayed, go to your dealer for service.