

## **Instruments** *(Continued)*

### **Opening/Ending display**

You can select the meter display when turning the ignition switch on or off from the STD mode and SP mode.

If you select the SP mode, the letters you want to show can also be displayed while the opening/ending display is shown.

#### **To set the opening/ending display:**

( P34)

#### **To set the opening/ending message:**

( P34)