

Instruments *(Continued)*

4 Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refueling after low fuel indicator lights. Deactivation is initially set.

- a Press the SEL button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.



- b Press SET button. The activation/deactivation of automatic reset mode is set, and the display returns to the ordinary display.

ADJ Setting Mode

1 Clock (12/24-hour) setting:

- a Select the ADJ setting mode. (P34)
- b Press the SEL button to select 12-hour or 24-hour.



- b Press the SET button. The clock 12/24 - hour is set, and the display moves to the changing of the clock setting.