

Instruments *(Continued)*

4 Backlight brightness L (low) adjustment:

You can adjust the brightness to one of five levels.

The backlight brightness L (low) can be adjusted in the same manner as H (high).

u L (low) can not adjust brighter than H (high).

Press the SET button. The brightness adjustment L (low) is set, and the display moves to the today date setting.

5 Today date setting:

la Press the SEL button until the desired year is displayed.

u Press and hold the SEL button to advance the year fast.



lb Press the SET button. The month digits start flashing.



lb Press the SEL button until the desired month is displayed.

u Press and hold the SEL button to advance the month fast.



ld Press the SET button. The day digits start flashing.

