



Ignition Switch

Switches the electrical system on/off, locks the steering.

- u Key can be removed when in the OFF or LOCK position.

Steering Lock: (P49)

A/M switch

To shift between the AT MODE and MT MODE. (P60)

Engine stop switch

Should normally remain in the (Run) position.

- u In an emergency, switch to the (Off) position (the starter motor will not operate) to stop the engine.



Horn button

N-D switch

To shift between Neutral and AT MODE. (P60)



Start button