

## Shifting Gears *(Continued)*

### Riding in MT MODE

Shift up and down with the shift up switch (+) and shift down switch (-).

The selected gear is shown on the gear position indicator.

- u If the MT MODE is selected, the transmission does not shift up automatically. Do not allow the engine revs to go into the red zone.
- u The transmission automatically shifts down when you slow down, even in MT MODE.
- u You will start from 1st gear even if MT MODE is selected.

### Gear shift operation

Shifting Up:


Press the shift up switch (+) (g ).

Shifting Down:

Press the shift down switch (-) (h ).

You cannot continue shifting gear by keeping the shift switch pressed.

To continue shifting gear release the switch and press it again.

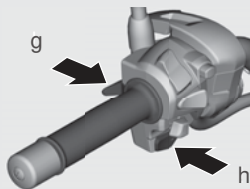

### Shift Limit

You can't shift down if the engine revs exceed the limit.