

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 123
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 124
<b>Warning Indicators On or Flashing</b> .....	P. 125
Low Oil Pressure Indicator .....	P. 125
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL) .....	P. 125
ABS (Anti-lock Brake System) Indicator .....	P. 126

<b>If the “-” Indicator is Blinking in the Gear Position Window While Riding</b> .....	P. 127
<b>Other Warning Indications</b> .....	P. 128
Fuel Gauge Failure Indication .....	P. 128
<b>Tire Puncture</b> .....	P. 129
<b>Electrical Trouble</b> .....	P. 137
Battery Goes Dead .....	P. 137
Burned-out Light Bulb .....	P. 137
Blown Fuse .....	P. 141