

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence 2 P. 52, 53
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - u If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Make sure the engine stop switch is in the  (Run) position 2 P. 48, 51
- Make sure the side stand is raised.
- Check for a blown fuse 2 P. 141
- Check for a loose battery connection or battery terminal corrosion 2 P. 89
- Check the condition of the battery 2 P. 137

If the problem continues, have your motorcycle inspected by your dealer.