


Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." 2 P. 80

Fuse Box Fuses

1. Open the luggage box. 2 P. 65
2. Remove the maintenance lid. 2 P. 93
3. Remove the fuse box cover.
4. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - u Spare fuses are provided inside of the fuse box cover.
5. Reinstall the fuse box cover.
6. Install the maintenance lid.
7. Close the luggage box.

NC700X

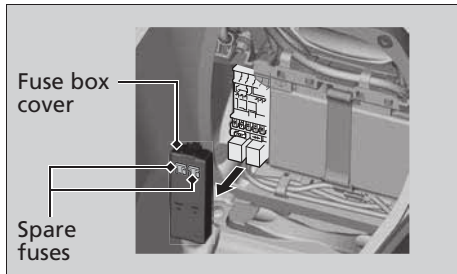

NC750XA

