

Stopping .....	54, 146
Environment .....	153
<b>Equipment</b>	
Owner's Manual .....	67
Tool Kit .....	67

**F**

Flooded Engine .....	52, 53
----------------------	--------

**Fuel**

Oxygenated .....	161
Recommended .....	64
Tank Capacity .....	64

Fuses .....	80, 141
-------------	---------

**G**

Gasohol .....	161
Gasoline .....	64

**H**

Hazard Switch .....	48, 50
Headlight Aim .....	121
Headlight Dimmer Switch .....	48, 50
Helmet Holder .....	68

High Beam Indicator .....	46
High Coolant Temperature Indicator .....	45, 124
Honda Contacts .....	165
Horn Button .....	48, 51

**I****Ignition Cut-off System**

Banking Sensor .....	147
Side Stand .....	109

Ignition Key .....	145
--------------------	-----

Ignition Switch .....	49, 51, 146
-----------------------	-------------

Indicators .....	45
------------------	----

Information Record .....	172
--------------------------	-----

Instruments .....	20
-------------------	----

**L**

Labels .....	7
--------------	---

Load Limits .....	15
-------------------	----

Loading Guidelines .....	15
--------------------------	----

Low Oil Pressure Indicator .....	45
----------------------------------	----

Lower Fairing .....	91, 92
---------------------	--------

Luggage Box .....	65
-------------------	----