

## Blown Fuse

---

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 85

### ■ Fuse Box Fuses

1. Open the luggage box. ► P. 70
2. Remove the maintenance lid. ► P. 99
3. Remove the fuse box cover.

4. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.  
► Spare fuses are provided on back side of the fuse box cover.
5. Reinstall the fuse box cover.
6. Install the maintenance lid.
7. Close the luggage box.