


Main Fuse

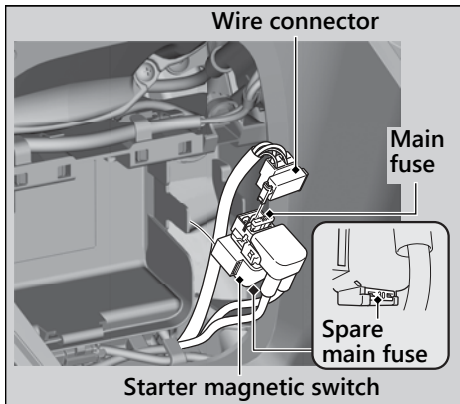

1. Open the luggage box. ► P. 70
2. Remove the maintenance lid. ► P. 99
3. Remove the battery. ► P. 95

4. Disconnect the wire connector of the starter magnetic switch.
5. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
► Spare main fuse is provided in the starter magnetic switch.
6. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.